


# PORTABLE BATTERY

## Quick Start Guide

### Charging the Portable Battery

Connect the included USB cable to the power adaptor or a Laptop/PC to charge the Portable Battery.

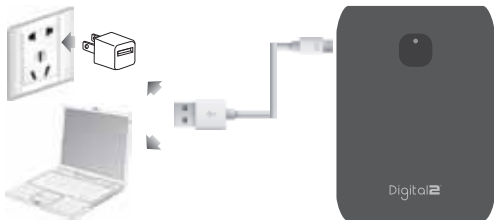

Once connected, the battery life indicator will indicate the charging status as shown:



1%~25% charged



26%~50% charged




50%~75% charged



Fully charged

## Charging your device

Connect your device to the Portable Battery's power output and press the power button to start charging.

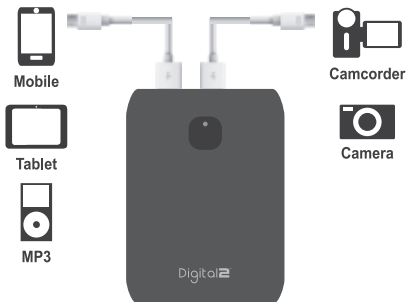

The Portable USB Battery will turn off within 20 seconds after you disconnect your charged device.

## Battery Life Indicator

- Press the power button once, the battery life indicator will light up to show the remaining battery life.



## **BATTERY CAUTION & DISPOSAL INFORMATION:**

---

Misuse or abuse of the lithium-ion battery may result in personal injury or fire

- Keep away from dangerous goods or materials
- Burn hazard
- Abuse operation of battery (e.g., overcharge, crush, puncture, excessive heat or moisture) may produce smoke. In such an event, ventilate the area.
- Extinguish any flames with carbon dioxide, dry-powder fire extinguisher, or cover with sand or mud.
- Do not disassemble, crush, puncture or incinerate.
- Do not expose to temperature above 140°F.
- Do not throw the battery away in the trash.
- For normal charges, the battery temperature should be between 32°F and 113°F, the charge time may increase at colder temperatures.
- Use at temperature below 104°F, charge fully prior to long storage periods or if it has been stored for more than three months.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per state or local guidelines.

# Warranty

---

Digital2 offers a ONE YEAR limited warranty for all Digital2 Portable Battery units, limited to those residing in the 48 continental United States and Canada.

Digital2 warrants the products to be free from defects in materials and workmanship as sold to the original purchaser. This warranty is for replacement for like-items only and do not cover items out of production if the company no longer stocks them. This warranty is not assignable. Third-party products, such as mobile/ handheld devices, media players, camcorders, cameras, tablets, etc. interacting with the Digital2 products are not covered by this warranty.

Digital2's sole obligation under this warranty is to replace or, at its option, to repair, free of charge, all the product's defective parts. This warranty applies only on the condition that the product has been installed, maintained, and operated under conditions of normal use and in accordance with the installation guide provided. The provisions of this warranty shall not apply if, in Digital2's sole judgment, the product has been subject to misuse or neglect, improper installation, accidental damage, or repaired or altered in ways that affect its performance or reliability.

## Digital2™

Website: [www.d2pad.info](http://www.d2pad.info)

U.S. Service Hotline: 1-888-863-0138